




Exposed drawing

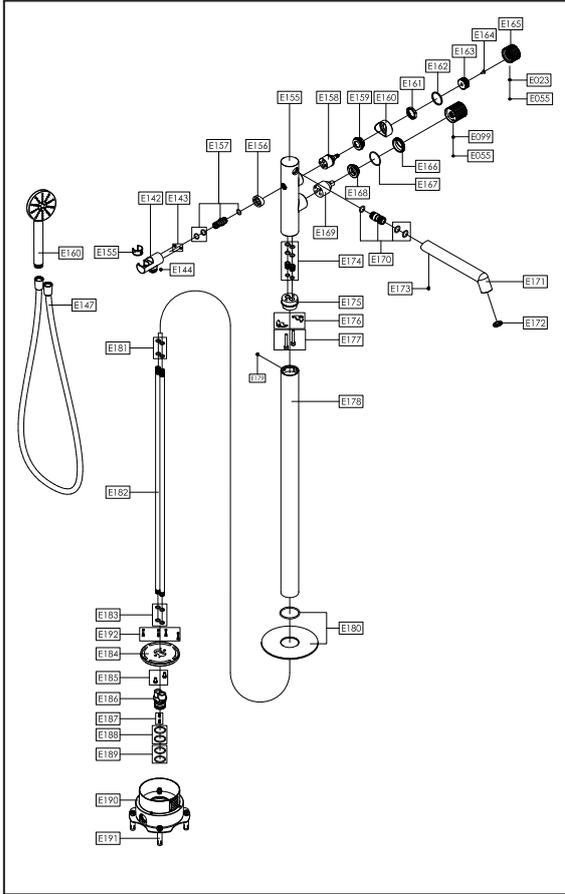


Instruction

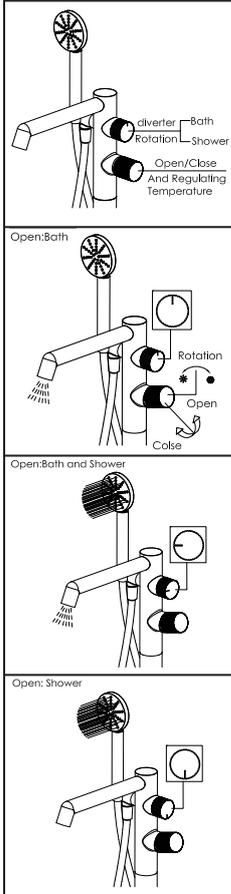


Installation steps

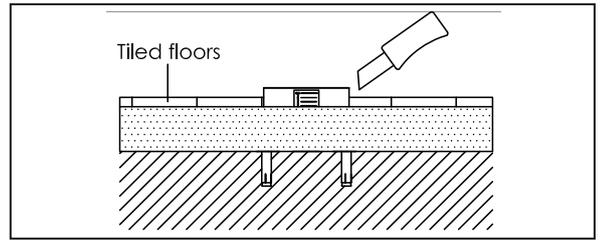


4. Pave the wood or ground tile and cut the exceeded part of the plastic box

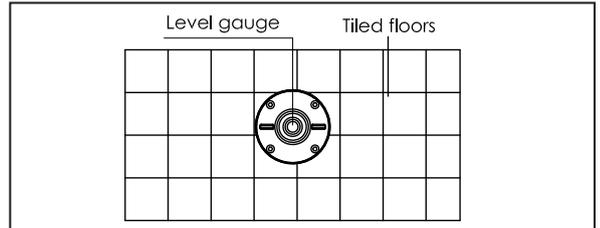


5. The effect drawing after the wood or ground tile paved

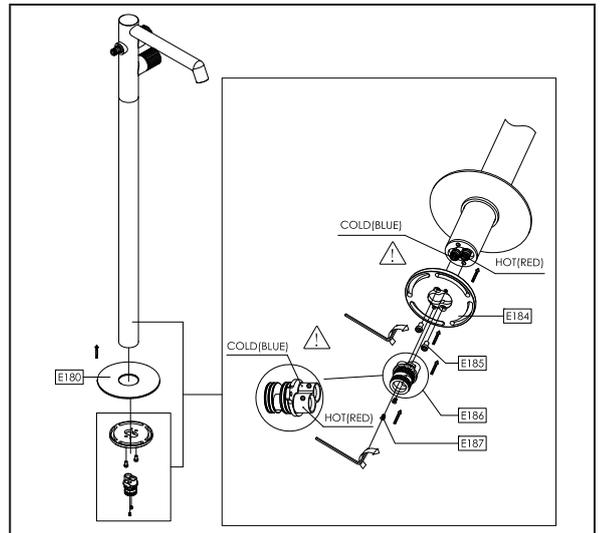


6. Put the covers E180 onto the pole E178 and mount the fixing round plate E184 onto the end of pole E178.

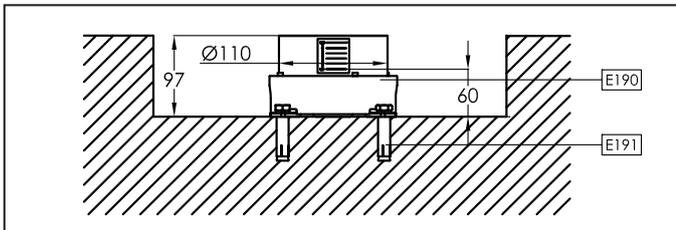


1. Mount the base union E190 onto the cement ground with E191 and keep it horizontal.

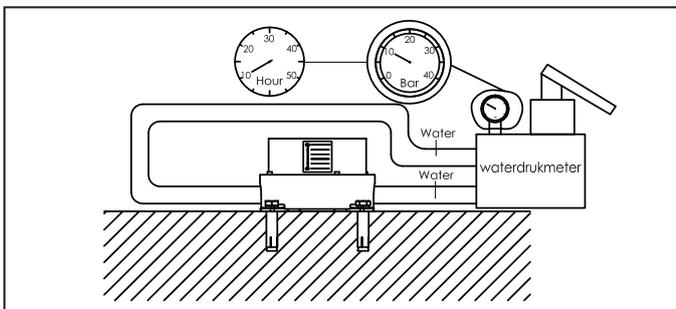

2. Make pressure test for the base union E190 by 10 hours in 10 bar to assure there is no any leakage before the next step.

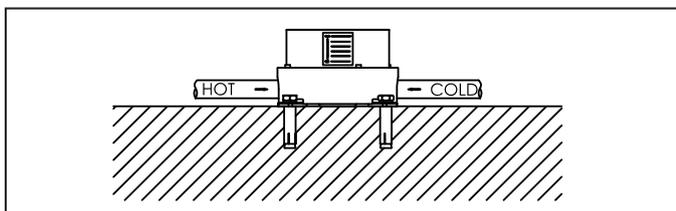

3. Connect the water inlets with the feeding pipes.

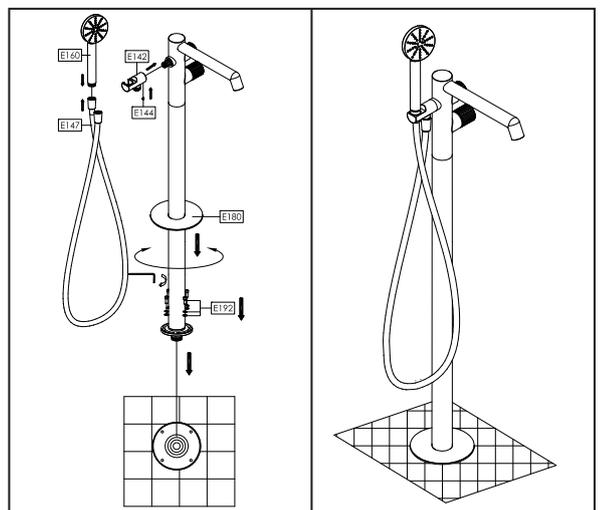

7. Take away the protective cover from the base union E190 and mount the poles E178 onto the base plate, locking with the nuts E192. Then slide down the cover E180 onto the floor.