




Exposed drawing

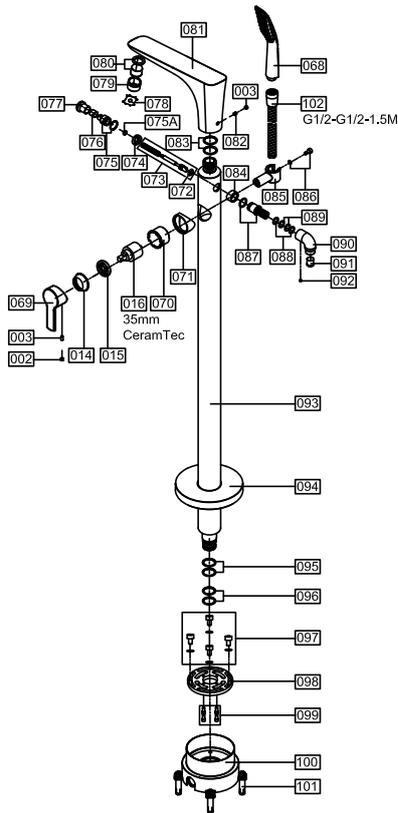


Installation steps

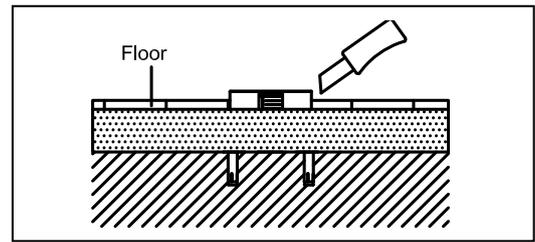


4. Pave the wood or ground tile and cut the exceeded part of the plastic box

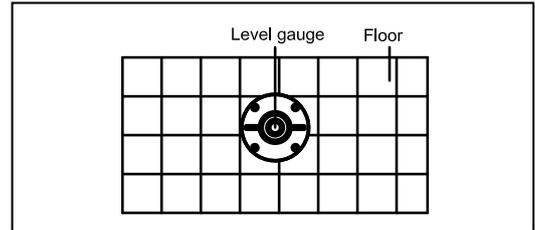


5. The effect drawing after the wood or ground tile paved

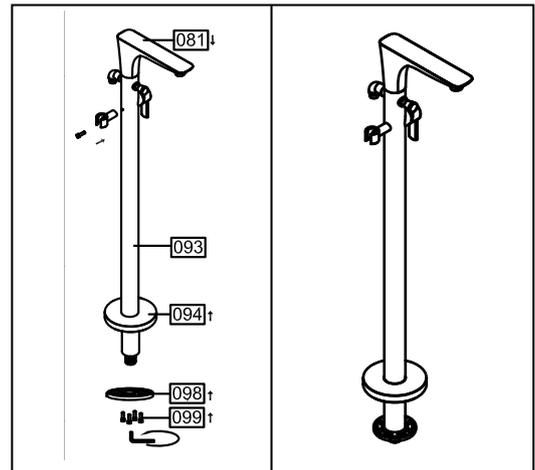


6. Put the covers 094 onto the pole 093 and mount the fixing round plate 098 onto the end of pole 093. Meanwhile fix the post 081 onto the body, locking with hexagonal spanner.

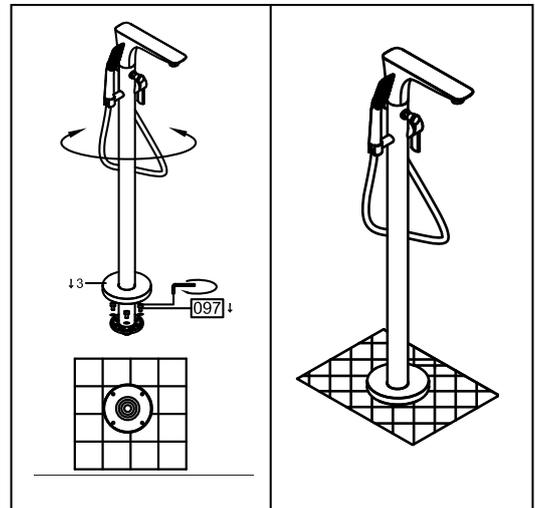


7. Take away the protective cover from the base union 100 and mount the poles 093 onto the base plate, locking with the nuts 097. Then slide down the cover 093 onto the floor

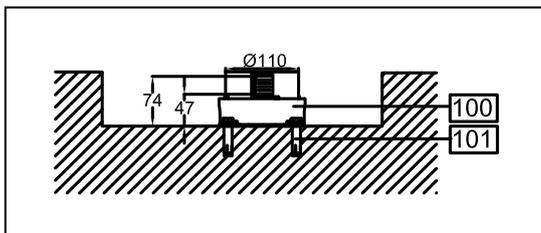

1. Mount the base union 100 onto the cement ground with 101 and keep it horizontal.

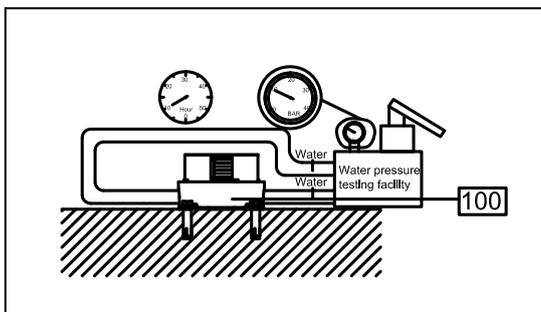

2. Make pressure test for the base union 100 by 10 hours in 10 bar to assure there is no any leakage before the next step.

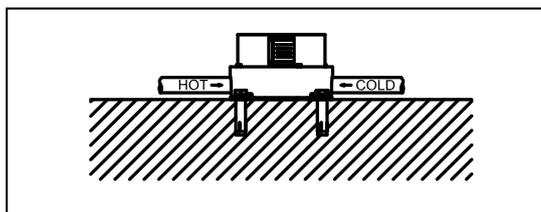

3. Connect the water inlets with the feeding pipes.